

Attention!

Before using the vacuum pump, please fill OIL (added) into the pump. Kindly consider following steps:



1. Open the screw cap



2. Fill in the oil (added) carefully and slowly until the optimal oil-level is reached (the optimal oil level is marked left and right next to the bull's eye)



3. Close the screw cap.
The pump is now ready for operation.