
MODEL OF A POTENTIOMETER ELS 2.13

Required kit:
P9901-4D Electricity 1

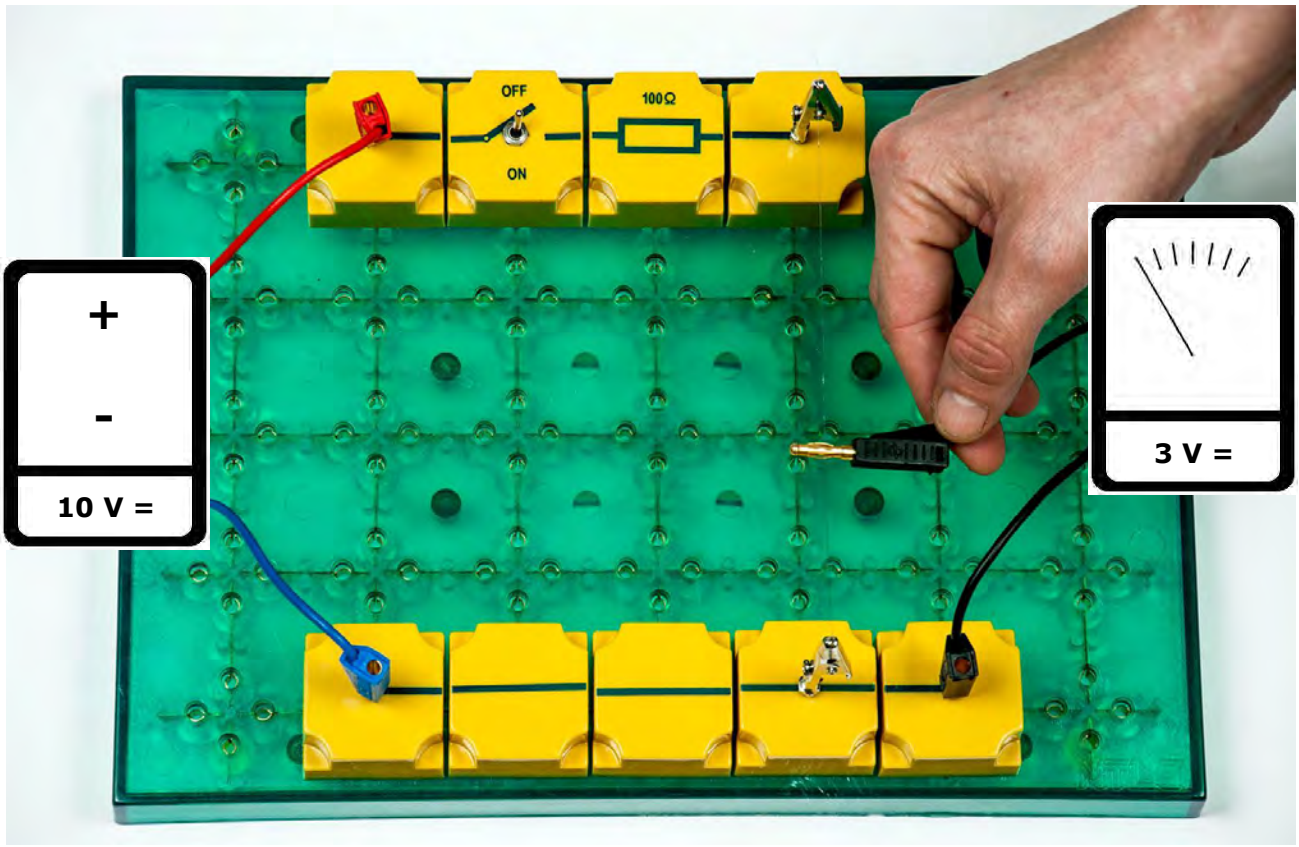

Material:

Item Code	Qty.	Description
P3310-1S	1	Connecting leads SE, set of 6
P3314-1A	1	Fuse wire, D = 0.1 mm, L=50 m
P3910-1A	1	Plug-in panel, small
P3910-1B	4	PIB connector
P3910-1C	2	PIB wire, straight
P3910-1D	1	PIB wire, straight, with socket
P3910-2R	1	PIB switch, ON/OFF
P3910-3G	1	PIB resistor 100 Ohm
P3911-3D	2	Crocodile clip with 4-mm plug

Additionally required:

1	Measuring device
1	Power supply

© Fruhmann GmbH, Austria